

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
AB			0812					
ABC				0452				
Accend	0711							
ACE	0713							
Admiral	0032,0155,1011							
Adyson	0730							
Aegir			0514					
Afreay							0688	
Agashi	0730							
Aiko	0707,0711,0730							
Aim	0711							
Aiwa	0261	0356				0581	0626,0649	
Aikai	0005,0159,0169, 0707,0711,0730 0731,0745,1020	0269,0270 0271,0281 0309,0310, 0357	0499					
Akiba	0711,0731,0742							
Akito	0711							
Akura	0711,0731,0738, 0740							
Alaron	0730							
Alba	0705,0711,0730, 0731,0738,0744	0356	0407,0522				0680	
Albiral	0001							
Aldes			0511,0514					
Alfa Gold			0810,0811					
Allstar	0711							
Allsat			0499,0512					
Allsonic			0511					
AlphaStar			0499,0826					
AMC							0643	
Amplivision	0739							
Amstar			0847					
Amstrad	0006,0711,0731, 0740,1011		0371,0372 0408,0488 0497,0515, 2014					
Anam	0711							
Anam National	0711							
Anitech	0711	0311						
Ansonic	0711							
Ankaro			0373,0511					
Antron			0522					
APEX							0672	
Apollo			0402					
Arlon			0510,2003					
Arianet							0654	
Aristona	0711							
A.R. Systems	0711							
Arthur Martin	0739							
Armstrong			0499					
Asat			0499					
Aston			0498					
Astra			0372,0409, 0488,0520					
Astro			0502,0514, 0522					
ASTRX			0840,0842, 0843,0846					
ASA	0007,0009,0013, 0032,0094,0155 0161,1010	0282						
Asberg	0711							
Asuka	0731							
ATLM							0627,0671	
ATLE						0579		
Atlantic	0711,0730							
Auchan	0739							
Audioton			0512,0522					
Audiosonic	0160,0711,0731							
Ausind	0008							
Aura			0430,0487					
Autovox	0004,0007,0012, 0014,0015,0078 0079,0104,0153							

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
AWA	0026,0027,0033, 0159,0160,0189 0220,0706,0708, 0709,0711,0714 0730,0740,1006							
Baird	0162,0737	0271,0273						
Barcom			0373					
Basic Line	0163,0711							
Baur	0711,1017,1037							
BBK							3003,3004, 3005,3006, 3007,3008 3009	3001, 3002
BEKO	0170,0226,0711, 0719,1018,1024							
Bentley							0635	
Benjamin			0468					
BEST	0741		0453					
Blaupunkt	0010,0017,0018, 0020,0054,0231 0232,0233,0234, 0236,0241,1004	0272,0274, 0275,0312, 0369			0568			0569 (VHS)
Blue Sky	0711,0719,0738, 0742,0744	0356						
BSkyB							0680	
BPL	0026,0160,0162, 0163,0711							
Brandt	0733,0735,0746							
Brinkmann	0711	0356						
Bush(UK)							0680,0685, 0689	
Brionvega	0104,0155,0164, 0165,0200,0201 0257,0711,1011	0276,0283						
Britannia	0730							
Bruns	0158							
Bigsat								
Boca			2013					
BSkyB			0497					
BSR	0016,0019,0021		0880					
Bush(UK)	0022,0711,0738	0281,0356	0402					
Cabletime	0246,0247,0251							0524, 0525, 0526 (CTV)
Cambridge			0375					
CANAL+			0804					
Carad	0717							
Caravell							0622	
Carena	0742							
Century	0145,0146,0155							
CGE	0019,0023,0024, 0145,0151,0169 0170,0231,1004	0270,0277						
CGM	0093	0291						
Chaparral	0216		0216,0374, 0410					
CineULTRA							0689	
Clycom			0507					
Clarivox	0001,0166,0167							
Clatronic	0705,0711							
CONIC							0673	
CODIAM	0138							
Condor	0711,0730		0520					
CNT			0514					
CommLink			0511					
Contec	0033,0016,0730		0511					
Continental Edison	0733,0744							
Conrad			0520					
Cosat			0512					
Crosley	0024,0025,0145, 0155,0231,1004							
Crown	0705,0711,0741, 0744,1008							
CS Electronics	0730							

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
CTC Clatronic	0096							
Daewoo	0168,0209,0711,0730						0660,3013	
Dainichi	0730							
Dansai	0707,0711,0730							
Dansette	0740							
Datcom			2005					
DSE (Digitor)	0026,0027,0033							
Decca(UK)	0002,0004,0026,0028,0031,0258,0711	0278,0356						
Denca							0665	
Denver							0689	
Denon						0547		0564, (TUNE) 0566 (DECK)
Denzel							0684	
Desay							0625	
Diamond							0683	
Digital			2006					
Distrisat			0499					
Dual	0255,0258,0711,0737,1011,1017	0273,0279					0684	
Dual-Tec	0004,0011,0019,0029							
Dumont	0155,1010,1023							
DMT			2013					
DNT			0409,0428,0430,0487,0499					
Drake			0376,0445,0446,0447,0495					
DSR			2003					
Dynasat			0491,0492					
Echostar			0377,0378,0379,0386,0409,0411,0412,0457,0458,0461,0462,0486,0800,0827,0855,0862,2008					
EH.Galaxy			0858					
Einhell			0497,0511					
EISAT			0822					
Electrosat			0870					
Elekta			0514					
Elbe	0001,0171,0711,0717	0313						
Elbe-Elbit	1011							
Elektronika	1008							
Elin	0730,0745							
Elite	0108,0711,1004							
Eltax							0642	
Elyxio							3000	
Elman	0019,0029,1023							
Elta	0730		0499,0512					
Emerson	0146,0155,0711,1010	0286						
EMME ESSE			0463,0464,0465					
Encore							0688	
Enzer							0684	
Euroman	0711,0730,0741,1008							
Europa	0711		0499					
Eurosky			0421,0497,0520					
Euro Space			0850					
Eurostar			0465,0513,0520,0872					
Euromphon	0000,0004,0019,							

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Euromphon	0029,0030,0146,0711,1023							
Exator			0522					
Expert	0739							
Fagor			0512					
Fenner	0033,0193,0240							
Ferguson	0733,0735,0746		2003				0679	
Fidelity(UK)	0003,0034,0229,0711,0730							
Filmnet	0202,0248							
Finlandia	0745,1010							
Finlux	0007,0008,0009,0013,0025,0026,0029,0035,0094,0161,0169,0221,0711,1010,1023	0278	0414,0415					
Firstline	0711,0730,0738	0356						
Fisher	0025,0036,0155,0167,0170,0255,1017	0280,0314,0315,0316			0529	0546		
Flint	0742							
Force			0836					
Formenti Phoenix	0003,0008,0025,0037,0038,0159,0730,1004,1023							
Fortec Star			0458,0808,0809,0846,0850,0851,0852,0853,0854,0856,0857,0859,0866,0867,0876,0878,0879					
Fracarro			0380,0381					
Freecom			0426					
FTE			0399					
France Telecom	0266							
Friac	0741							
Fuba			0413					
Funtach			0823,0824					
Funai	0016,0160,1019	0359						
Galaxis	0711		0511,0512					
Galaxys			0873					
GBC	0002,0004,0019,0025,0026,0031,0033,0039,0040,0041,0042	0281						
Geant Caslno	0739							
GEC(UK)	0711	0278						
Geloso	0004,0019,0025,0032,0033,0039,0149,0150	0281						
General	0733,0743	0358						
General Technic		0356						
Genexxa	0740							
Glucar Record			0382,0416					
GMI			0521,2019,2020,2021,2022,2023,2024					
Goldhand	0730							
Goldstar	0003,0004,0043,0080,0153,0172,0252,0700,0701,0711,0730,1011	0282					0633,0682	
Goodmans	0119,0707,0711,0737,0744	0301,0356						
Gorenje	0170,0173,0741,1008							
Granada(UK)	0002,0004,0027,0041,0044,0045,0046,0047,0048,0049,0711,0735,0739,1010	0272,0278,0283,0314,0369						

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Grandin	0705,0711,0717,0719,0739,0742		0496					
Great Wall	0253							
Grey	1025		2003					
Grundig	0003,0010,0018,0020,0045,0050,0051,0053,0054,0056,0094,0711,0744,1038	0272,0275,0284,0356,0361,0369,0755	0383,0400,0402,0484,2025				0655,0686,3019	3020, (DVDR) 3021, (PDR) 3022 (AMP)
Halifax	0730							
Haitai						0548		
Hampton	0730							
Hanseatic	0025,0027,0037,0044,0052,0055,0258,0711	0278,0285	0516					
Hantarex	0000,0711							
Hanuri			0514					
Harwood	0740							
Hauppauge	0026,0711							
Harmari/Kardon							0690	
HCM	0740							
Hemmermann	0057							
Heliocom			0520					
Hevet			2007					
Hinari	0033,0044,0058,0059,0060,0711,0744	0281,0286,0287,0317,0360						
Hisawa	0739,0742							
Hirschmann			0415					
Hitachi	0004,0040,0041,0042,0044,0047,0055,0061,0062,0063,0064,0065,0066,0067,0068,0174,0221,0222,0710,0711,0737	0273,0281,0285,0288	0483,0828,0829	0530			0684	
Hitsu	0742							
Hoshai	0742							
Hotel TV	0704							
HTS			0827					
Hughes			0828,0829					
Humax			0505,2004,2012					
Huth			0421,0479,0511,0512,0520					
Huanyu	0730							
HWALIN			0816					
Hygashi	0730							
Hyper	0003,0004,0033,0153,0193,0730							
Hypson	0739,0742							
ICE	0730							
Ices	0730							
ICX International			0417					
ID Digital			2004					
Imperial	0019,0023,0024,0145,0151,0169,0170,0231,0711,1004	0277,0289						
Ingelen	0717,0744							
Info			2010					
Inno Hit	0000,0004,0031,0043,0060,0146,0175,0711,1004							
INTER (265)	0725							
Inkei						0541		
Intercord	1017							
Interstar			2011					
Interfunk	0005,0027,0040,0045,0046,0052,0069,0070,0071,	0278,0290						

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Interfunk	0073,0075,0155,0711							
Intervision	0711,0742,0744,1023	0356	0512,0520,0523					
Irradio	0008,0039,0043,0060,0153,0262,0711							
Iskra	1023							
IT	0723							
ITS	0730							
ITT-Nokia	0005,0032,0033,0040,0041,0045,0049,0069,0070,0071,0072,0074,0076,0162,0168,0176,0177,0717,0745	0270,0273,0276,0290,0291,0292,0316	0384,0385,0418					
Janco	0249,0250							
JBL							0623,0624	
JEC	0707							
Jeemon			0386					
Jerrold			0454	0417				
Johansson			0387,0512					
JSR			0386					
JMB							0686	
JVC	0077,0119,0178,0179	0270,0273,0292,0318,0319,0320,0321,0328					0605,0636,0664,3012	
Kaisui	0163,0711,0730,0742							
Kamp	0730							
Karcher	0159,0163,0175,0711,0717,0741,1008						0549	
Kathrein			0388,0389,0390,0419,0469,0499,0507,0522					
Kawasho	0730							
Kendo	0146,0711,0717,1011	0356						
Kennedy	0025,0078,0079,1011							
Kenwood							0527,0531,0532,0533,0534	0550,0580,0572,0630,0663
Kingsley	0730							0684,3015
Kiss								
KR			0522					
Kneissel	0711,0717	0356						
KONIG	0027							
Konka	0711							
Kontakt	0744							
Korting	0037,0155,0157,0741							
Kotron	0740							
Kuba	1017							
Kyoshu	0740							
Kyostar			0522					
Lasat			0497,0514,0520					
Lemon			0503					
Lenco	0033,0039,0183,0238,0239,0240,0711,1023	0325,0355	0423,0426,0480,0481,0482				0595,0596,0597,0598,0599,0600,0601	0060,0549,0585,0586,0587,0588,0589,0590,0591,

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Lenco						0592, 0593, 0594		
Lecson	0711,0718						0687	
Lenoir	0004							
Lexus			0499					
Leyco	0705,0711							
LG	0711,0730						0682	
Lifetec	0711,0738	0356						
Life Sat			0504,0516					
Linton	1017							
Loewe Opta	0052,0081,0155, 0156,0189,0213 0242,1022	0272,0278, 0369						
Logik	0028	0287,0322, 0360					0669	
Logix	0738							
Lorenzen			0497,0520					
Luma	0032,0082,0711, 1011	0322						
Lumatron	1011							
Luxor	0005,0045,0047, 0055,0068,0083 0084,0085,0086, 0087,0162,0177 0745,1010	0285,0291	0384,0391, 0392					
Macab			0420					
Macom			0444					
Magnavox			0477,0830, 0831			0553, 0576, 0604	0571	
Magnadyne	0000,0019,0025, 0029,0057,0147 0149,0150,0155, 1023							
Magnasonic		0291						
Magnafon	0000,0003,0008, 0029,0030,0730 1023							
Manesth	0707							
Manta							3011	
Manhattan	0738		0512,0514					
Marantz	0026,0027,1017	0272,0278, 0301	0499					
Mark	0730							
Matsui	0004,0006,0028, 0041,0088,0182 0705,0707,0735, 0742,0744	0287,0322, 0332,0356					0683,0686	
Maspro			0388,0393, 0402,0490					
Max			0520					
Maximal	0058							
Maxview							0670	
Maxwell	1023							
M & B			0516				0670	
Mega			0499					
Medion	0738	0356						
Megas	0717							
Melectronic	0255,0711,0730, 0737,1010,1017		0496,0507, 0511,0514, 0522					
Melvox	0739							
Memorex		0282,0314						
Metz	0018,0053,0089, 0090,0091,0155 0180,0183	0272,0275, 0294,0369, 0370	0383					
Micromaxx	0738							
Micromay		0356						
Microsat			0874					
Microsoft							0619,0620	0621 (MCE)
MINA			0494					
Minerva	0010,0018,0045, 0051,0053,0744		0383,0400, 0484					

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Minoka	0740							
Minerva		0272,0275, 0369						
Mission						0553		
Mitsubishi	0044,0052,0092, 0119,0154,0155 0181,0182,0711	0278,0281 0293,0320 0362,0751	0489				0662	
Mivar	0000,0003,0093, 0094,0095,0245 0259,0730,0734							
Morgans	0711							
MTC	0730							
Multisystem	0159							
Multitec	0738							
Multek							0638	
Neufunk							0684	
Multitech	0096,0170,0172, 0711,0730	0281,0325						
Murphy(UK)	0041,0730							
MME			0217					
Morgans			0421,0497, 0499,0512, 2012					
Motorola			2000					
Monyka							0684	
NAD		0363						
NEC	0184,0711,0742	0273,0313, 0320	0422,0478, 0493			0551		
Neckermann	0004,0026,0044, 0055,0082,0097 0170,0711,1006, 1011,1017,1037	0270,0272 0273,0278 0285,0286 0369	0421					
N.E.I.	0166,0711							
Neufunk	0711,0717							
New Tech	0737							
Neosat			0845					
Neolion Box			2007					
Network			0394					
Neuhaus			0520					
Neusat			2013					
New Star			2015					
Nicamagic	0730							
Nikkai	0707,0730							
Noblito	0003,0008,0029, 0051,0146,0730 1023	0272,0369						
NOKIA	0720,0745,1004, 1010		0502,0720, 0807					
Nordmende	0065,0067,0075, 0096,0099,0100 0101,0102,0103, 0104,0134,0185 0186,0222,0711, 0733,0737,1003 1036	0270,0273 0279,0292 0295,0296 0297,0318 0319,0321 0323,0324 0326,0327 0328,0329 0330	0514			0535, 0549		
Obritech			0426					
Octagon			0522					
Oceanic(F)	0005,0040,0105, 0106,0107,0739							
Okano	0711	0356						
Onceas	0004							
Onkyo						0536, 0537	0613, 0614, 0615, 0616	0647,0653
Openfox			2013					
Opentel			2016					
Optex			0512					
Opticum			2006,2016					
Orion	0006,0016,0028, 0057,0088,0108 0109,0187,0188, 0189,0711,0735	0286,0322 0331,0332 0333,0356 0360					0686,3010	

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Orion	0740,1001							
Orion							0683	
Ormond	0738							
Osaki	0711,0740	0282						
Otto Versand	0025,0027,0044, 0052,0055,0711 1017	0278,0285						
Pace			0394,0395, 0400,0402, 0485,0500 0814,0815, 2001					
Pacific							0676,0677, 0678,0679	
Pael	0003,0008,0730							
Palladium	0197,0711	0271,0281	0421					
Palsonic	0711,0740							
Palcom			0396					
Palsat			0423					
Panama	0730							
Panasat			0819,0863					
Panasonic/National	0001,0003,0019, 0037,0040,0106 0110,0111,0112, 0114,0190,0212 0241,0711,0745, 1036	0274,0290 0312,0354	0473,0832	0538			0573,0574, 0629,0639	
Panda			0520					
Pansat			0455					
Pathe Cinema	0730,0739							
Paragon				0806				
Pershin	0739							
Penney		0313						
Pentax		0288						
Philco	0019,0023,0024, 0025,0151,0155 0169,0170,0231, 0711,1004							
Philex	0229							
Philips	0003,0026,0027, 0046,0073,0113 0115,0155,0191, 0192,0193,0194 0223,0266,0230, 0242,0265,0711 0737,1009,1011, 1017,1024,1033 1034	0278,0302 0334,0335 0336,0369	0402,0424, 0425,0460, 0477,0499, 0507,0518, 0522,0803, 0830,0831, 0841			0552, 0553, 0579, 0604	0559,0675 (EQ), 0561 (PIP), 0562 (TAPE), 0565 (TUNE) 0567 (DCC)	0560 0561 0562 0565 0567
Phoenix	0730							
Phonola	0175,0711,0730	0278,0335						
Phonotrend			0511,0512				0689	
Pilot (1621Y)		0753 (Video2)						
Pilot (1624Y)	0729 (PIP)							
Pilot (P1528Y)		0752						
Pilot (P1707Y)	0721							
Pilot (P3033)	0727							
Pilot (P3050)		0754						
Pilot (P4005)	0726							
Pilot (P567)	0728							
Pilot (P716)	0724							
Pioneer	0000,0027,0067, 0243,0711,0737	0278,0320 0334,0336 0363,0364 0365	0474	0545	0554, 0555, 0610	0571,0658		
Polestar	02140							
Polsat			2009,2017					
Powerpoint	0744							
Prandoni-Prince	0008,0032,0146, 1023							
Praxis	0217							
Prelsner			0497					
Premier			0802					

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Premium X			0501					
Primestat			0454					
Proflitronic	1023							
Proline	0746							
Prosat	0001		0405,0451, 0479,0511, 0523					
Protek			0504					
Proton							0553	
Provision			0514					
Prosonic	0705,0711,0730, 0736							
Protech	0738							
Provision	0711							
PYE	0711	0320						
PSR			0858					
PTT TELCOM			0515					
Uuadra Vision	0739							
Quasar	1023							
Quartz		0314						
Quadral			0511,0523					
Quelle	0004,0005,0007, 0008,0009,0010 0013,0016,0026, 0027,0028,0045 0050,0051,0052, 0069,0094,0153 0221,0231,0232, 0234,0235,0236 0711,0738,1003, 1004,1007,1008 1010,1011,1022, 1035,1036	0272,0275 0278,0286 0298,0369	0383,0520					
Radiola	0242,0711		0499					
Radiomarelli	1023							
Radiotone	0705,0740						0549	
Rank(UK)	0022							
RBM(UK)	0022,0094							
Radix			0409,0428, 0430,0487 0522					
Rainbow								
Raite								0684
RCA	0204,0210,0211, 0746	0349	0450,0818, 0835 0456					0602,0661, 0667
RC-AK								
Rediffusion(UK)	0005,0041,0116, 0745							
Red Star	0711							0650,0652
REX	0011,0021,0032, 0078,0079,0118	0273,0292, 0319						
REC								0685
RFT	1023		0499,0511					
Rhapsody	0730							
RM(RM2200)			0860					
Rover			0523					
Roadstar	0039							0685,0689
Royal Lux	0740,0741							
ROTEL								0553, 0582, 0583
RTG.(SpaceNet)			0846					
SABA	0000,0065,0067, 0075,0085,0098 0099,0100,0103, 0117,0155,0185 0186,0222,0224, 0733,0735,0737 0745,0746,1032	0270,0273 0279,0292 0295,0318 0319,0321 0326,0337 0338	0514,0520					
SAE								0553
Sagem	0717,0742		0518					
Sakura			0397,0398					
Saisho	0004,0006,0028, 0088,0182,0244	0286,0287 0322,0332 0356,0380						
Salora	0005,0047,0048,	0283,0285	0391,0418					

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Salora	0055,0066,0068 0069,0076,0082, 0086,0097,0162 0177,0195,0249, 0250,0267,0268 0745,1010	0314						
Sambers	0000,0004,0008, 0029,0030,0043 1023							
Sampo						0688		
Samsung	0026,0033,0043, 0159,0160,0170 0175,0212,0215, 0264,0702,0703 0711,0716,0730, 1000,1015,1016 1029,1031	0289	0459,0475, 0476,0801, 0877				0637,0648, 0666	
Sandra	0730							
Sansui	0711	0320,0356				0603	0686	
Sanyo	0013,0031,0044, 0074,0119,0120 0121,0122,0123, 0162,0167,0170 0182,0195,0205, 0711,0730	0291,0314, 0316,0339				0604, 0606	0681	
SAT 100			0372,0488					
Sateco			0426					
Satcom			0515,0516, 0520					
Satline			0523					
Satpartner			0514,0522					
Sanyo					0539			
Schacke			0522					
Schneider	0004,0011,0015, 0019,0025,0026 0036,0038,0255, 0258,0262,0711 0737,0738,1011, 1017,1023,1028 1030	0278,0281, 0289	0516				0679	
Schwaiger							0679	
Scientific Atlanta			0452					
SEG	0096,0711,0730, 0738,0744	0281,0289	0516				0684	
SEL- Sinudyne	1001,1011,1023							
Sears		0315						
Seleco	0011,0058,0078, 1011	0309	0512					
SET			0825,0837, 0838,0839					
Santra	0707							
Senta		0277						
Serino	0717,0742							
Sharp	0044,0054,0119, 0124,0196,0198 0225,0227	0301,0302, 0341			0531	0550, 0566	0628,3010	
Sherwood					0540, 0541, 0577, 0578			
SHOV	0033							
Shinton		0281						
Siarem	0000,0025,0029, 0155,1023							
Sicatel	0001							
Siemens	0010,0231,0232, 0233,0234,0236 0711,1004	0272,0275, 0291,0369	0383					
Siesta	0254							
Sigma			2007					
Signal			0458,0850, 0855					
Silva	0730							
Silver	0160,0711							
Singer	0025,0029,0147,							

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
	0149,0155,0711 0739,1023							
Sintrack							0427	
Sinudyne	0006,0016,0025, 0026,0029,0057 0109,0125,0155, 0192,0197,0711	0278,0287						
Skysonic	0718							
Skardin			0821,2002		0644			
Sky Box			2007					
Sky Digital			0880,0881					
Skymaster			0479,0511, 0513,0516, 0517,0523 0825,0882, 0883				0656	
Skymax			0499					
Skyvision			0512					
SL			0497					
Solavox	0745							
Sonolor	0739							
Sokol							0645	
Sony	0028,0119,0126, 0127,0128,0129 0130,0182,0199, 0228,0260	0298,0299, 0340,0342, 0343,0344, 0367,0750	0472,0834		0617	0556, 0557, 0575, 0607	0575,0631, 0632,0641, 0657	0563 (TAPE) 0575 (CDV) 0618 TUNE
Stern	0078							
Star			0459,0470, 0802,0846, 0868,0871 0875					
Strong			0399,0423, 0426,0480, 0492,0508, 0514,0522, 0864,0865, 0868					
STS			0393					
STV			0413					
Sunkai	0742,0744,1001							
Sun Moon Star			0813					
Sunstar	0705		0497					
Superfa	0730							
Supertech	0730							
Super Max			0846,0848, 0849,0850 0858,0862, 0869					
Supex								
Susuma	0735							
Sydney	0730							
Sytong	0730							
Sylvania							0553, 0604	
Tai Wah.	0218,0219							
TADA				0448				
Tadiran			0817					
Tagra			0512					
Tantec			0396					
Tandberg	0016,0180,0266, 1011	0322						
Tashiko	0730							
Tatung	0002,0004,0026, 0028,0031,0131	0278,0356					0659	
Teac	0712,0740,0742						0608, 0611	0634
TEC	0735,0743,1011							
Tech Line	0738							
Technics	1036				0542	0558, 0609		
Technisat		0356	0409,0428, 0429,0430, 0431,0487, 0499,2018					

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
Technovision	0263							
Technosat			0263,0467, 0802,0869					
Technowelt			0520					
Tedelex			0466					
Tele + 1	0248							
Teknika			0471					
Telasat			0516					
Telestar							0651	
Telesciel			0522					
Telecom			0884					
Teleka			0522					
Telemaster			0514					
Televia	0186,0733							
Telefunken	0067,0075,0098, 0132,0133,0134, 0135,0140,0185, 0186,0231,0235, 0733,0735,0737, 0743,0746,1003, 1004,1026,1032, 0203,0246	0270,0273, 0279,0292, 0318,0319, 0321,0323, 0330,0345, 0346,0347						
Teleservice								
Telemax			0432					
Telemeister		0359	0398,0409, 0428,0430, 0469,0487					
Teletech	0738		0513					
Televideon	0730							
Televiso	0739							
Telewire			0512					
Tensai	0013,0016,0033, 0037,0039,0178, 1023							
Tevion	0738	0356					0683	
Thomson	0065,0067,0075, 0078,0098,0100, 0103,0185,0186, 0222,0722,0733, 0735,0737,0743, 0746,1027,1032	0270,0273, 0279,0292, 0318,0323, 0324,0328	0520,2009, 2017				0668	
Thom-Ferguson	0001,0135,0136, 0137,0140,0144, 0148,0152,0160, 0186,0229,0256, 0735,1010,1011,	0270,0273, 0300,0303, 0304,0305, 0306,0308, 0319,0329, 0330,0348, 0368	0394,0395, 0400,0401, 0402,0433, 0485					
TMK			0286					
Topline			0356					
Tokai			0499				0684	
Tokyo	0707,0730,							
Toshiba	0022,0044,0094, 0119,0138,0139, 0141,0142,0707, 0732,1035,1037,	0273,0292, 0307	0442,0444, 0506,0833				0571,0640	
Tonna			0512					
Topfield			0509					
Transonic	0742							
Transtec	0730							
Trilux	1005,1021							
Triumph	0732		0506					
TPS			0805					
Trwam			2005					
Uher	0011,0012,0036, 0037,0038,0078, 0255,1017	0273,0289						
Ultravox	0003,0025,0082, 0096,0146,0155, 0730	0276						
Unimor	1002,1012							
Universum	0094,0160,0221, 0738,0741	0356					0682	
Univox	0001							
Unbranded			0481					
Uniden			0403,0404,					

Code form for the components

Brand/Device	TV/TXT	VCR	SAT/DSS	CABLE	HIFI	CD	LD/VCD/DVD	AUX
			0406,0443, 0830,0831					
Unisat			0499					
United Satellite			0440					
Universum			0520					
US Electronics			0417					
Vector		0313	0430,0487					
Vegavox	0169							
Ventana			0499					
Viewstar			0477					
Vision			0519					
Victor			0318,0328, 0366				0605	
Video			0313					
Videocon	0033,0138,0141, 0715							
Videologique	0730							
Videotechnic	0730							
Visiola	0730							
Voxson	0032,0155							
Vortec			0459,0801, 0855					
Vortic Star			0801					
Vtech			0434,0507					
Waltham	0733							
Watson	0037,0705,0738, 1004							
Watt Radio	0001,0003,0025, 0029,0030,0057, 0730,1023,							
Wega Color	0119,0143							
Wela			0497					
Wetekom			0516					
Wesder							0689	
Winer			0080,0387, 0449,0844					
Wintergarten			0511					
Wharfedale	0718						0687	
White	0003,0037,0159, 0730	0276,0282						
Westinghouse	0730							
Winco	0740							
WISI			0409,0420, 0435,0436, 0437,0438, 0439					
Wilson			0514				3014	
Woorisat								
Xenon		0322						
XSAT			0500					
Xoro								3017
Yakumo								3018
Yamaha				0543,0612, 0544			0646	
Yamakawa							0684,3016	
Yamishi	0742							
Yoko	0004,0159,0730, 0741,1008							
Zanussi	0078							
Zehnder			0390,0507, 0514					
Zenith	0203,0237		0441,0444, 0445,0446, 0447				0570,0682	
Zinwell			0821					
Zodiac			0522					
Others	0206,0207,0208, 1013,1014	0350,0351, 0352,0353	0820,0861				0674	